

TS43F-0267-208-EL

Lens module specifications

Focus tunable lens (Optotune)	Model	EL-16-40-TC-VIS-5D			
	Focal power	-2	0	+3	dpt
Magnification		0.263	0.268	0.276	X
F/#		7.5			(Fixed)
Maximum sensor format		4/3			inch
Image circle (Φ)		23			mm
FoV (at max sensor format) H x V		66.6 x 53.4	66.1 x 53	66.1 x 53	mm
Working distance		263.6	212.5	138.6	mm
Field depth		4.2			mm
Optical leverage		25.0			mm/dpt
Optical Distortion		≤0.1	≤0.1	≤0.1	%
Telecentricity		≤0.1	≤0.1	≤0.1	°
Pixel size recommended		3.5			μm
MTF @ 50 lp/mm		56			%
Wavelength range		400 – 700			nm
Lifecycles (10-90% sinusoidal)		>1'000'000'000			cycles
Mount		F			
Dimension (Φ x L)		Φ110.0 x 241.1			mm
Weight		1258			g


Focus tunable lens specifications

EL-16-40-TC-VIS-5D

Focal power range (@30°C) ³	-2 to +3	dpt
Wavefront error (at 525 nm & 0 mA) Optical axis vertical / horizontal	<0.25/<0.5	λRMS
Operating temperature	-20 to +65	°C
Storage temperature	-40 to +85	°C
Temperature sensor & memory	STTS2004	(STMicroelectronics)

Electrical specifications

Control current (typical)	-250 to +250	mA
Absolute max. control current	-500 to 500	mA
Power consumption	0 to 0.7 (nominal) 0 to 2.8 (absolute max.)	W
Motor coil resistance @ 30°C	12	Ω
Absolute maximum voltage (coil)	10	V
Absolute maximum voltage (temp. sensor)	4.3	V

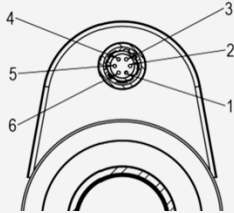Hirose connector (HR10G-7R-6P)	Function	Sensor pins	
Pin 1	Control current +	-	
Pin 2	Control current -	-	
Pin 3	Ground	1-4	
Pin 4	Power (3.3V)	8	
Pin 5	I ² C SCL	6	
Pin 6	I ² C SDA	5	

Controller

The liquid lens is controlled with electrical current and must be operated by a suitable lens controller. Hirose cables and liquid lens controllers are sold separately. The following controllers are considered fully compatible with TS43F-0267-208-EL:

- Optotune embedded controller ECC-1C
- Optotune lens driver EL-E-4i
- Optotune industrial controller ICC-4C-500



Additional selection of controllers is available at <https://www.optotune.com/controllers>

Mechanical drawings

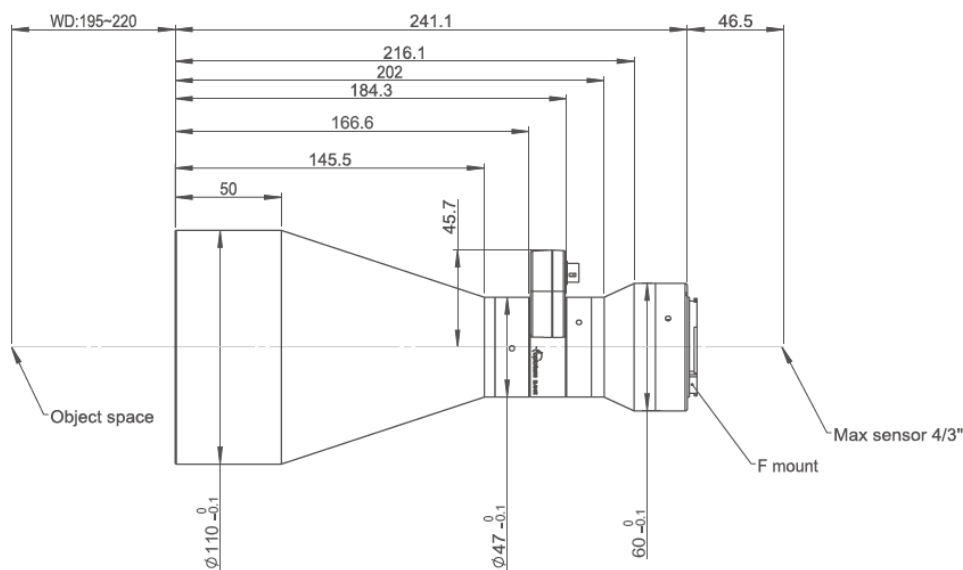


Figure 1: Mechanical drawing of the TS43F-0267-208-EL

For more information on optical, mechanical and electrical parameters, please contact sales@optotune.com